

# HASLER

## Installation Instructions

AH30, AH10, AH5

### Introduction

The **United States Postal Service** has announced a rate change effective January 8, 2006. FEDEX and UPS have also announced a rate change for the beginning of January. The Rate Card provided with these instructions will update your Hasler scale with the most current rates.



January 2006

**Follow the instruction on the back of this notice  
to install the new rates in your scale.**

### If You Have Questions

**Call your local Hasler dealer** or contact us:

Hasler, ®Inc.  
19 Forest Parkway  
Shelton, CT 06484-6140

Phone 800-446-6027

Fax 800-631-0546

The USPS will institute a 5.4% increase on Domestic and International rates. Here is a brief description of the rates affected by the increase.

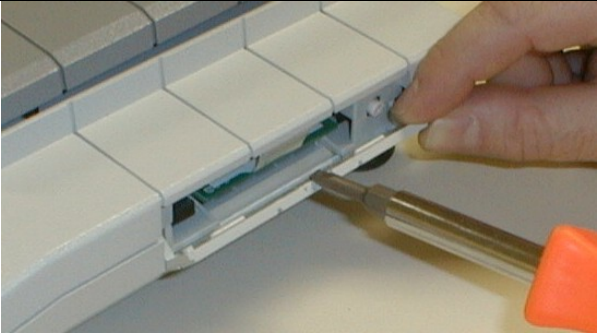

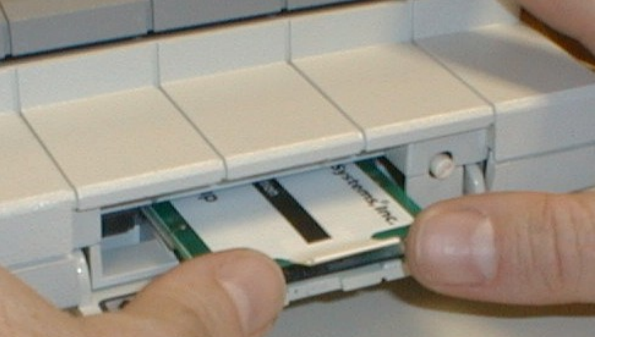
### Rate Change Highlights

First Class	First ounce, up 2 cents from \$.37 to \$.39. Each additional ounce, up 1 cent to \$.24.
Priority Mail	Base rate up 20 cents to \$4.05. One pound up 30 cents to \$6.15.
Express Mail	8 ounces, up 75 cents to \$14.40.
Parcel Post	2 pounds, up 22 cents to \$4.36.
Post Card	Up 1 cent to 24 cents.
Certified Mail	Up 10 cents to \$2.40.

### Return Of Old Rate Cards

Return the old rate card in the prepaid, self-addressed, padded envelope that arrived with the new rate card.

**Installation Procedure**

#	Action	Comments
1	Unplug power from the scale.	
2	<p>On the right side of the scale console, locate the plastic cover with the cutout.</p> <p>Insert the tip of a flat screwdriver into the horizontal slot at the top of the cutout.</p> <p><u>Gently</u> pry the plastic cover towards you; the cover should drop down.</p>	
3	<p>If a Rate Card is installed, remove it by pressing the black release button (the card should move slightly outward) and then pull the white tab toward you until the card is out.</p>	
4	<p>Insert the "<b>new</b>" Rate Card into the scale, making sure the white label is facing up and the card is inserted between the rails. Close the cover.</p>	<p>When inserting the card, simultaneously press on each side of the Rate Card until it is firmly in place. EPROM chips on the card should face down.</p> 
5	Apply Power to the scale.	
6	<p>The system will prompt the following:  <b>“ENTER AUTHORIZATION NUMBER _____”</b>          _____”</p> <p>Enter the authorization number that arrived with card and press [ENTER]</p>	<p><b>NOTE:</b>          The system will not prompt for an authorization number if the rate card version stays the same.</p> <p>The new rates have been successfully loaded.</p>