

HASLER

Installation Instructions

WJ135, WJ180, WJ215

Introduction

The **United States Postal Service** has announced a rate change effective January 8, 2006. The Rate Card provided with these instructions will update your Hasler WJ meters to the most current rates.



January 2006

**Follow the instruction on the back of this notice
to install the new rates in your scale.**

If You Have Questions

Call your local Hasler dealer or contact us:

Hasler, ®Inc.
19 Forest Parkway
Shelton, CT 06484-6140

Phone 800-446-6027

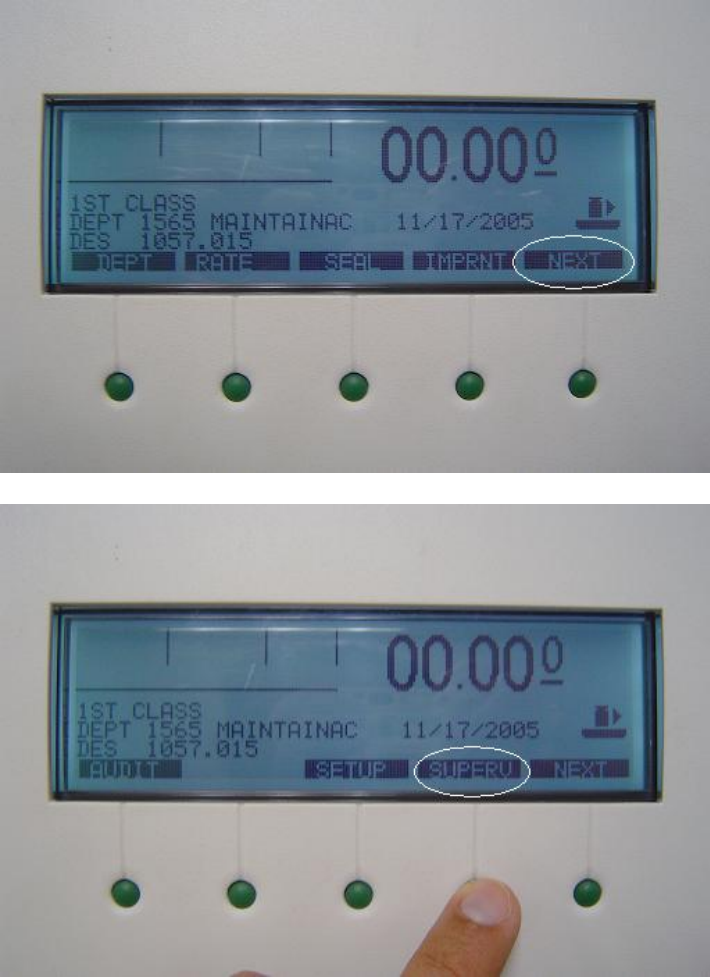
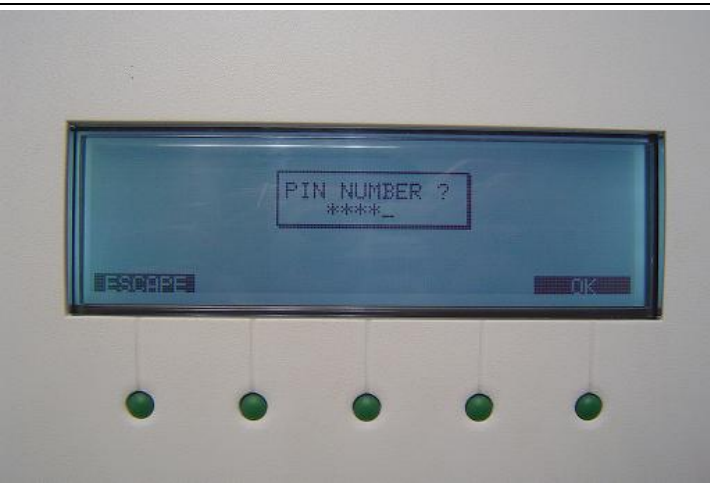
Fax 800-631-0546

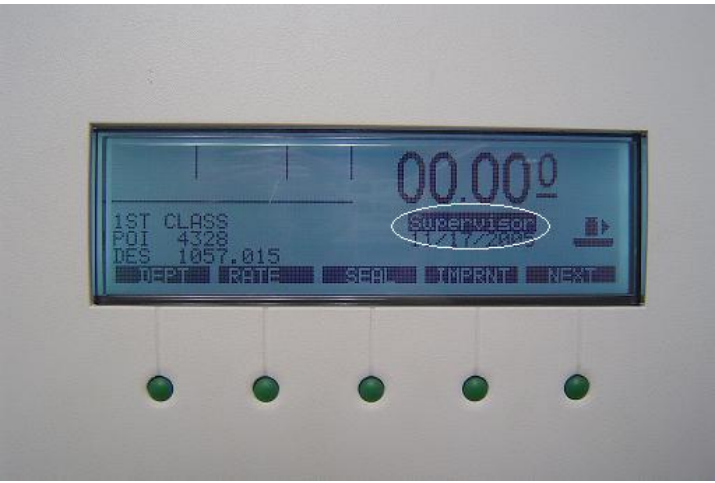


Rate Change Highlights




The USPS will institute a 5.4% increase on Domestic and International rates. Here is a brief description of the rates affected by the increase.


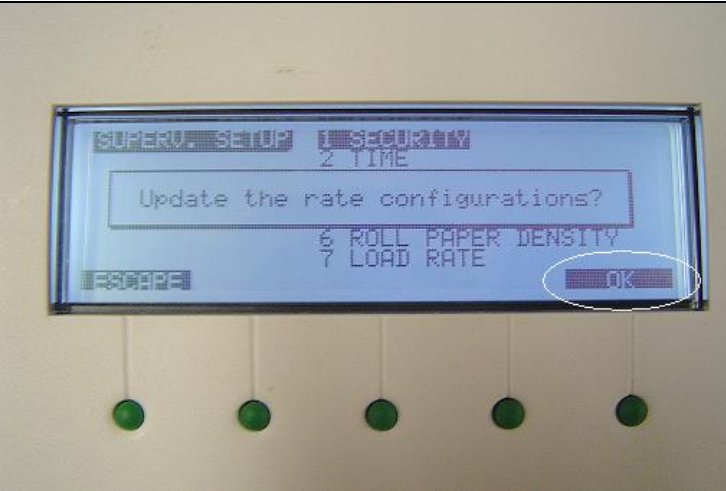
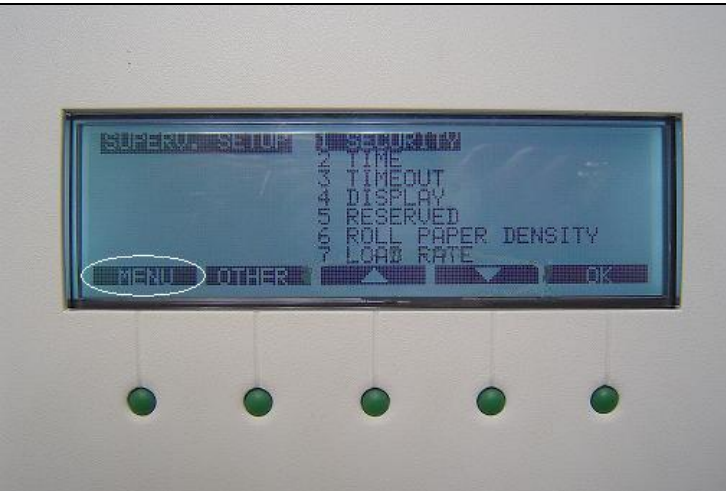
First Class	First ounce, up 2 cents from \$.37 to \$.39. Each additional ounce, up 1 cent to \$.24.
Priority Mail	Base rate up 20 cents to \$4.05. One pound up 30 cents to \$6.15.
Express Mail	8 ounces, up 75 cents to \$14.40.
Parcel Post	2 pounds, up 22 cents to \$4.36.
Post Card	Up 1 cent to 24 cents.
Certified Mail	Up 10 cents to \$2.40.

Installation Procedure

Step	Action	Figure
1	From the metering screen (shown) press NEXT until you see SUPERV. Press the green button below SUPERV.	 <p>The first photograph shows a meter display with the following text: '00.000', '1ST CLASS', 'DEPT 1565 MAINTAINAC 11/17/2005', and 'DES 1057.015'. At the bottom, there are menu options: 'NEXT', 'SUPERV', 'SETUP', and 'RATE'. The 'NEXT' option is circled in red. The second photograph shows the same display, but the 'SUPERV' option is circled in red, and a finger is shown pressing the green button located directly below it.</p>
2	Enter the Supervisor Pin Number (9430) and press OK.	 <p>The photograph shows the meter display with the text 'PIN NUMBER ?' and '****_'. At the bottom, there are two buttons: 'ESCAPE' on the left and 'OK' on the right. The 'OK' button is highlighted with a red box.</p>

<p>3</p>	<p>Now you will be in the Supervisor main screen (shown).</p>	 <p>Press NEXT until you see SETUP.</p> <p>Press the green button below it.</p> 
<p>4</p>	<p>Now you will be in the SETUP sub-menu.</p> <p>Scroll down (using the up & down arrows) to LOAD RATE.</p>	

<p>5</p>	<p>Insert the Rate Card (with chip facing up) into the side slot (shown).</p> <p>Once the card is fully inserted press OK.</p> <p>NOTE: If the card is not inserted, or not inserted properly, then you will see error: "E102, Waiting for memory card, Insert and retry" (shown).</p> <p>Remove and reinsert card.</p> <p>Assure card is fully inserted.</p> <p>Press OK.</p>	 
<p>6</p>	<p>Once you have pressed OK you will see, "Loading in progress" (shown).</p>	

<p>7</p>	<p>Once the rates have been loaded you will see the message: "Loading Successful" (shown). Press OK.</p>	 <p>A screenshot of a monochrome LCD screen on a device. The screen displays the following text: 'SUPERV. SETUP' and 'SECURITY' at the top, '2 TIME' below them, and a central box containing 'Loading successful'. Below the box, it shows '6 ROLL PAPER DENSITY' and '7 LOAD RATE'. At the bottom right, there is an 'OK' button highlighted with a white oval. Below the screen are five green indicator lights.</p>
<p>8</p>	<p>The screen will display "Update the rate configuration" (shown). Press OK. NOTE: It is important that you press OK when asked to update the rate. If you do not, the new rate will not take effect.</p>	 <p>A screenshot of a monochrome LCD screen on a device. The screen displays the following text: 'SUPERV. SETUP' and 'SECURITY' at the top, '2 TIME' below them, and a central box containing 'Update the rate configurations?'. Below the box, it shows '6 ROLL PAPER DENSITY' and '7 LOAD RATE'. At the bottom left, there is an 'ESCAPE' button, and at the bottom right, there is an 'OK' button highlighted with a white oval. Below the screen are five green indicator lights.</p>
<p>9</p>	<p>The rates have now been successfully updated. Press the MENU button to return to the Supervisor screen. Then press the EXIT button to return to User mode.</p>	 <p>A screenshot of a monochrome LCD screen on a device. The screen displays the following text: 'SUPERV. SETUP' and 'SECURITY' at the top, followed by a list of menu items: 'TIME', 'TIMEOUT', 'DISPLAY', 'RESERVED', '6 ROLL PAPER DENSITY', and '7 LOAD RATE'. At the bottom left, there is a 'MENU' button highlighted with a white oval. At the bottom right, there are three buttons: 'OTHER', a left arrow, and an 'OK' button. Below the screen are five green indicator lights.</p>