

HASLER

Installation Instructions

WJ20

Introduction

The **United States Postal Service** has announced a rate change effective January 8, 2006. The Rate Card provided with these instructions will update your Hasler WJ meters to the most current rates.



January 2006

**Follow the instruction on the back of this notice
to install the new rates in your scale.**

If You Have Questions

Call your local Hasler dealer or contact us:

Hasler, ®Inc.
19 Forest Parkway
Shelton, CT 06484-6140

Phone 800-446-6027




Fax 800-631-0546





Rate Change Highlights



The USPS will institute a 5.4% increase on Domestic and International rates. Here is a brief description of the rates affected by the increase.

First Class	First ounce, up 2 cents from \$.37 to \$.39. Each additional ounce, up 1 cent to \$.24.
Priority Mail	Base rate up 20 cents to \$4.05. One pound up 30 cents to \$6.15.
Express Mail	8 ounces, up 75 cents to \$14.40.

Installation Procedure

Step	Action	Figure
1	<p>From the "Ready" screen (shown)</p> <p>Press the MENU button.</p>	
2	<p>When you see 'Adverts' press the right Green (or Blue) button below the screen, until you see 'Memory Card'.</p> <p>(Shown Below)</p>	
3	<p>Once you see "Memory Card" Insert the Rate Card.</p>	

<p>4</p>	<p>Assure that the card is properly inserted.</p> <p>The chip must be facing you (shown).</p> <p>Then press OK on the keypad.</p>	
<p>5</p>	<p>If the Rate Card is not properly inserted then base will display 'Insert Card'. (shown)</p> <p>Take the card out and reinsert it as previously shown.</p> <p>Press OK.</p>	
<p>6</p>	<p>The rate to be loaded will display on the screen.</p> <p>Press OK.</p>	
<p>7</p>	<p>Wait for the loading to complete.</p>	

<p>8</p>	<p>Once the loading is complete the base will display a 'Loading Complete' message.</p> <p>Press the 'C' button on the keypad.</p>	 A photograph of a handheld device's LCD screen. The screen is green and displays the text "MEMORY CARD" on the top line and "LOADING COMPLETE" on the bottom line. Below the screen are two green circular buttons, each with a white arrow pointing outwards.
<p>9</p>	<p>From this screen press 'C' until you return to the "Ready" screen.</p> <p>Your new rates have been successfully loaded.</p>	 A photograph of the same handheld device's LCD screen. The screen is green and displays the text "MEMORY CARD" on the top line and "USD403C" on the bottom line. Below the screen are two green circular buttons, each with a white arrow pointing outwards.