

HASLER

Installation Instructions

WJ60, WJ65, WJ90, WJ95, WJ110

Introduction

The **United States Postal Service** has announced a rate change effective January 8, 2006. The Rate Card provided with these instructions will update your Hasler WJ meters to the most current rates.



January 2006

**Follow the instruction on the back of this notice
to install the new rates in your scale.**

If You Have Questions

Call your local Hasler dealer or contact us:

Hasler, ®Inc.
19 Forest Parkway
Shelton, CT 06484-6140

Phone 800-446-6027



Fax 800-631-0546



Rate Change Highlights


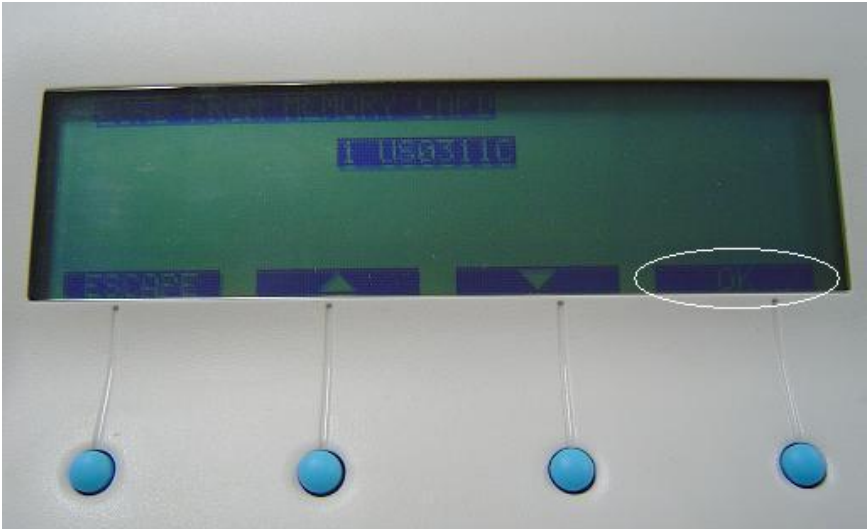
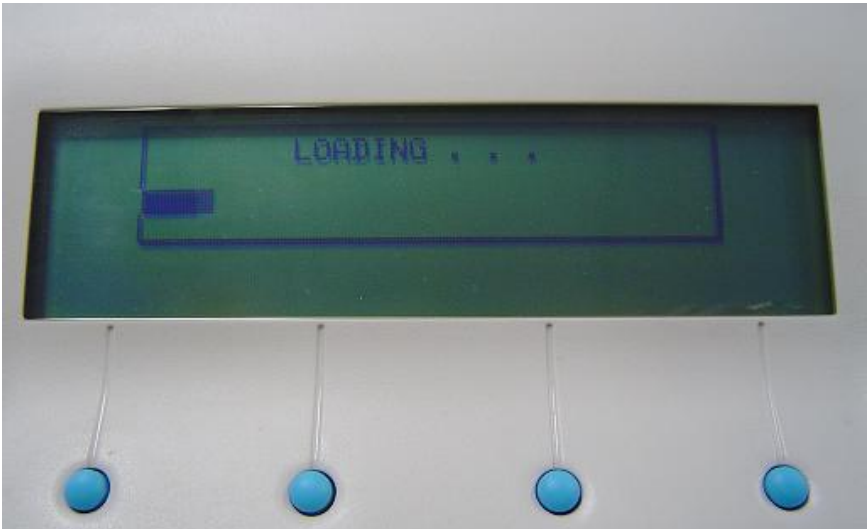
The USPS will institute a 5.4% increase on Domestic and International rates. Here is a brief description of the rates affected by the increase.




First Class	First ounce, up 2 cents from \$.37 to \$.39. Each additional ounce, up 1 cent to \$.24.
Priority Mail	Base rate up 20 cents to \$4.05. One pound up 30 cents to \$6.15.
Express Mail	8 ounces, up 75 cents to \$14.40.
Parcel Post	2 pounds, up 22 cents to \$4.36.
Post Card	Up 1 cent to 24 cents.
Certified Mail	Up 10 cents to \$2.40.

Installation Procedure

Step	Action	Figure
1	<p>From the main screen (shown)</p> <p>Press the button below SUPERVIS</p>	 <p>The image shows a green LCD screen with the word 'HASLER' in large blue letters. Below the screen are four blue buttons. The first button on the left is circled in white, indicating it is the one to be pressed.</p>
2	<p>Enter the Supervisor Pin number (9430).</p> <p>DO NOT press enter. The mailing machine will go into supervisor automatically</p>	 <p>The image shows the same green LCD screen, now displaying 'ENTER SUPERVISOR PIN' in blue letters. To the left of the text is a small blue icon of a padlock. Below the screen are the same four blue buttons.</p>

<p>3</p>	<p>Now you will be in the Supervisor main screen (shown).</p> <p>Scroll down to 'Load From Memory Card' (using the up & down arrows).</p>	
<p>4</p>	<p>Assure that the card is properly inserted.</p> <p>The chip must be facing up.</p> <p>Then press OK</p>	

<p>5</p>	<p>If the Rate Card is not properly inserted then base will display 'Insert Card'.</p> <p>Take the card out and reinsert it as previously shown.</p> <p>Press OK.</p>	 <p>A photograph of a device's screen displaying the text "INSERT CARD" in blue. Below the screen are four blue buttons. The rightmost button, labeled "OK", is circled in white.</p>
<p>6</p>	<p>The rate to be loaded will display on the screen.</p> <p>Press OK.</p>	 <p>A photograph of a device's screen displaying a rate value "1.0563110" in blue. Below the screen are four blue buttons. The rightmost button, labeled "OK", is circled in white.</p>
<p>7</p>	<p>Wait for the loading to complete.</p>	 <p>A photograph of a device's screen displaying the text "LOADING . . ." in blue. A progress bar is visible on the left side of the screen. Below the screen are four blue buttons.</p>

<p>8</p>	<p>Once the loading is complete the base will display a 'Loading Complete' message.</p> <p>Press Escape.</p>	 A photograph of a handheld device screen. The screen is green with blue text. At the top, it says "LOAD FROM MEMORY CARD" and below that, "LOADING COMPLETE". At the bottom left of the screen, the word "ESCAPE" is written in blue and is circled with a white oval. Below the screen are four blue circular buttons, each connected to the screen by a thin white cord.
<p>9</p>	<p>Press ESCAPE to return to the Supervisor screen.</p>	 A photograph of a handheld device screen. The screen is green with blue text. At the top, it says "LOGISTIC". At the bottom left of the screen, the word "ESCAPE" is written in blue and is circled with a white oval. To the right of "ESCAPE" are three other buttons: a left-pointing arrow, a right-pointing arrow, and the word "LOGIC". Below the screen are four blue circular buttons, each connected to the screen by a thin white cord.
<p>10</p>	<p>Press ESCAPE to return to the main 'Hasler' screen.</p>	 A photograph of a handheld device screen. The screen is green with blue text. At the top, it says "SECURITY & DEPT". Below that are several menu items: "REGISTERS", "TEXT", "LOAD FROM MEMORY CARD", and "SETUP". At the bottom left of the screen, the word "ESCAPE" is written in blue and is circled with a white oval. To the right of "ESCAPE" are three other buttons: a left-pointing arrow, a right-pointing arrow, and the word "LOGIC". Below the screen are four blue circular buttons, each connected to the screen by a thin white cord.